

Colour Scan Guide

HOW TO SCAN



Contents Page


Table of Contents

Scan to E-MAIL	3
Scan Settings	4
Scanning to USB stick	8

Scan to Email


1. Place the document to be scanned on the glass or the ADF of the machine.
2. Select the **Fax/Scan** option on the control panel of the machine.
3. Select the **Direct Input (or Address Book if you have configured a “one touch” scan destination)** Tab.
4. Enter your email address in the direct input email address section or select your “one touch” account from the address book” section.

 (The Control Panel screen will change from the Copy Panel to the Scan Panel).

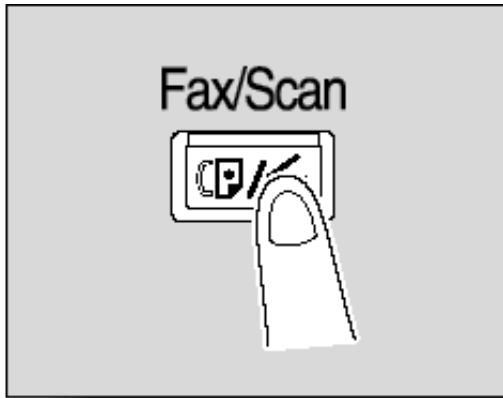


Scan Settings

 Select **Scan Settings** on the bottom of the screen. These settings allow the users to determine output attributes of the scanned document.

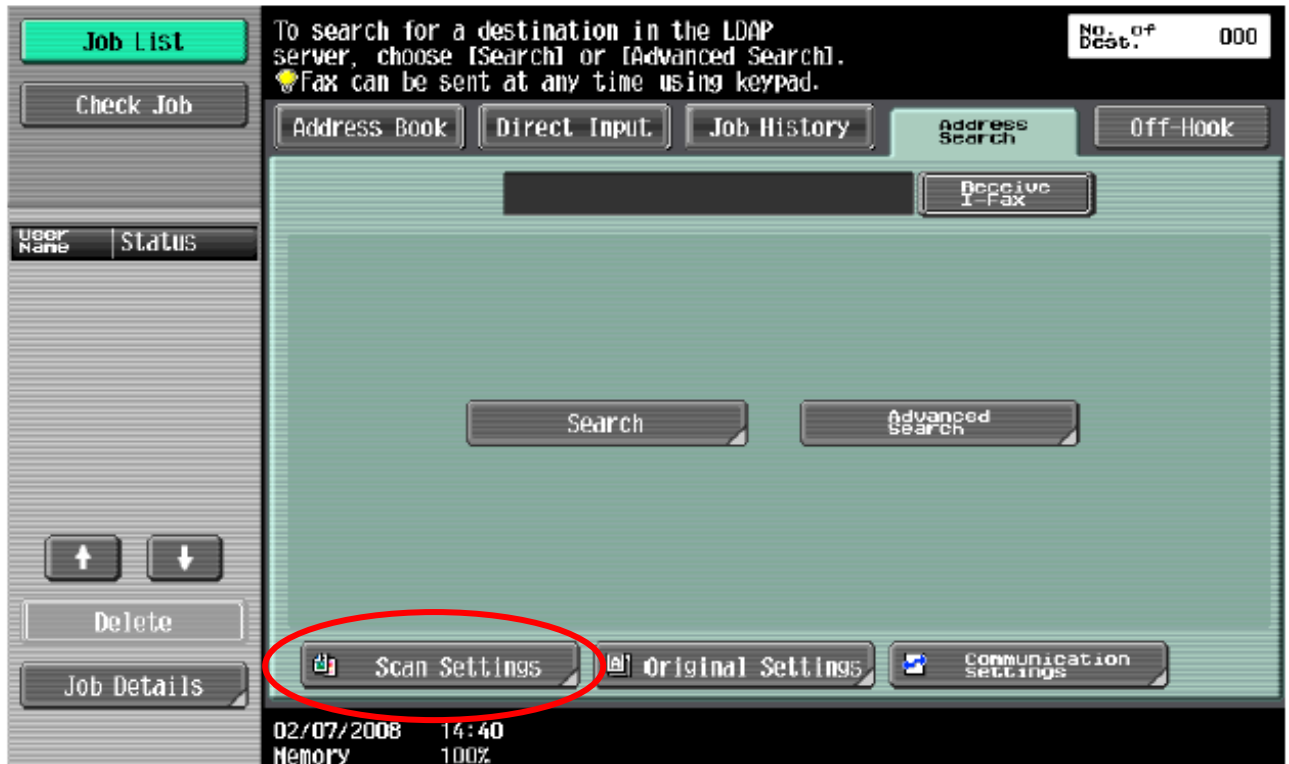


Scanning attributes that can be modified are:

 - Original Type
- Simplex / Duplex
- Resolution
- File Type
- Density

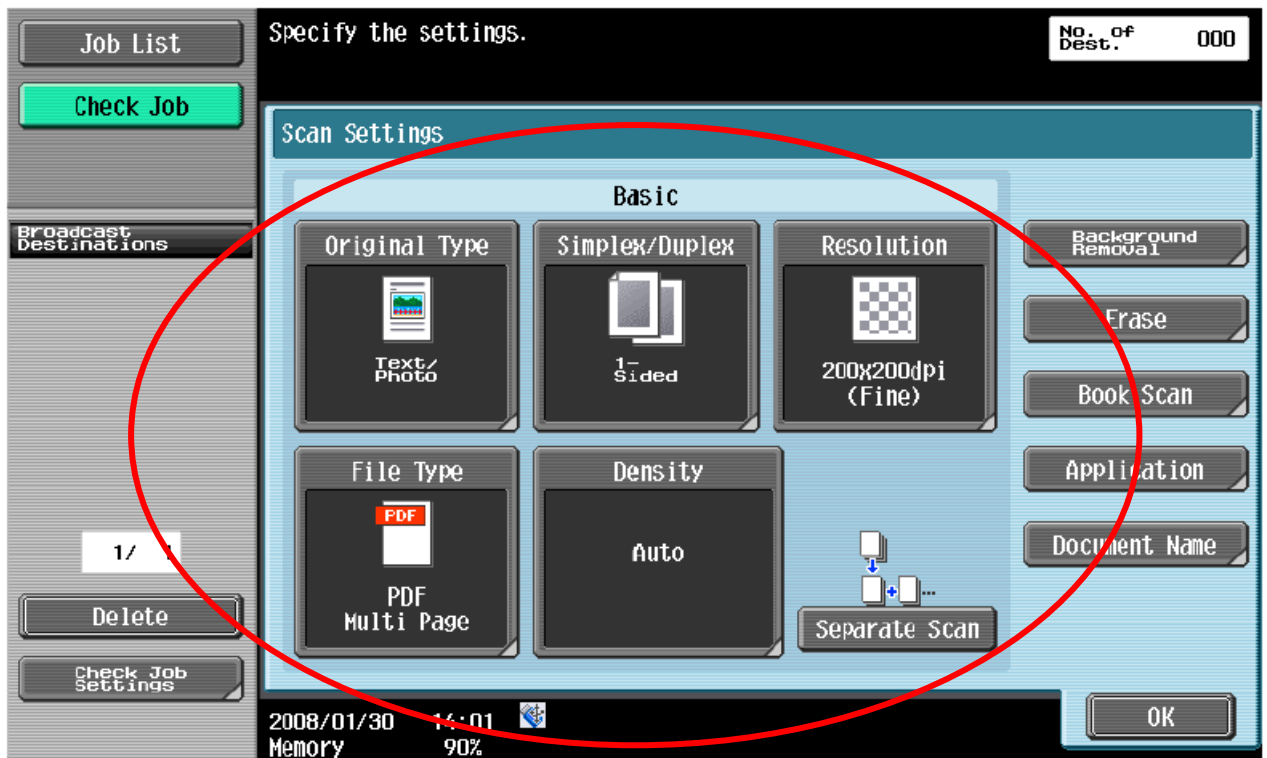

 
7. Once you are ready to start scanning Press the Green Start Button on the device to start the scan process.

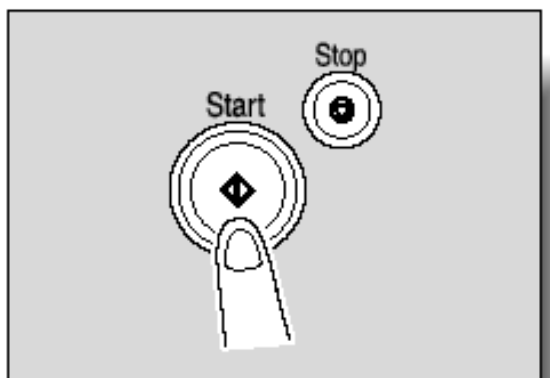

Scanning to USB

Saving a scanned document to external memory (USB Stick)

 
1 Connect external memory to this machine, and press [Save a document to external memory].

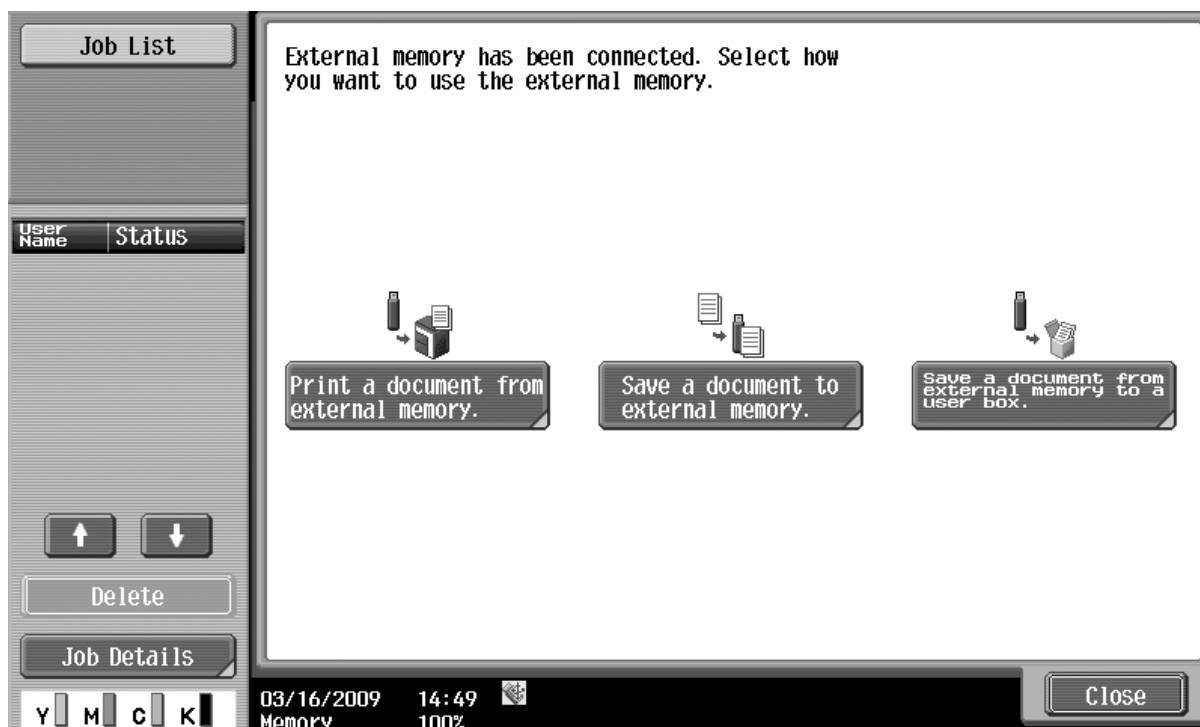

If an external memory is already connected, press [Save Document] on the screen for User Box function.*




 2 Check the document name.

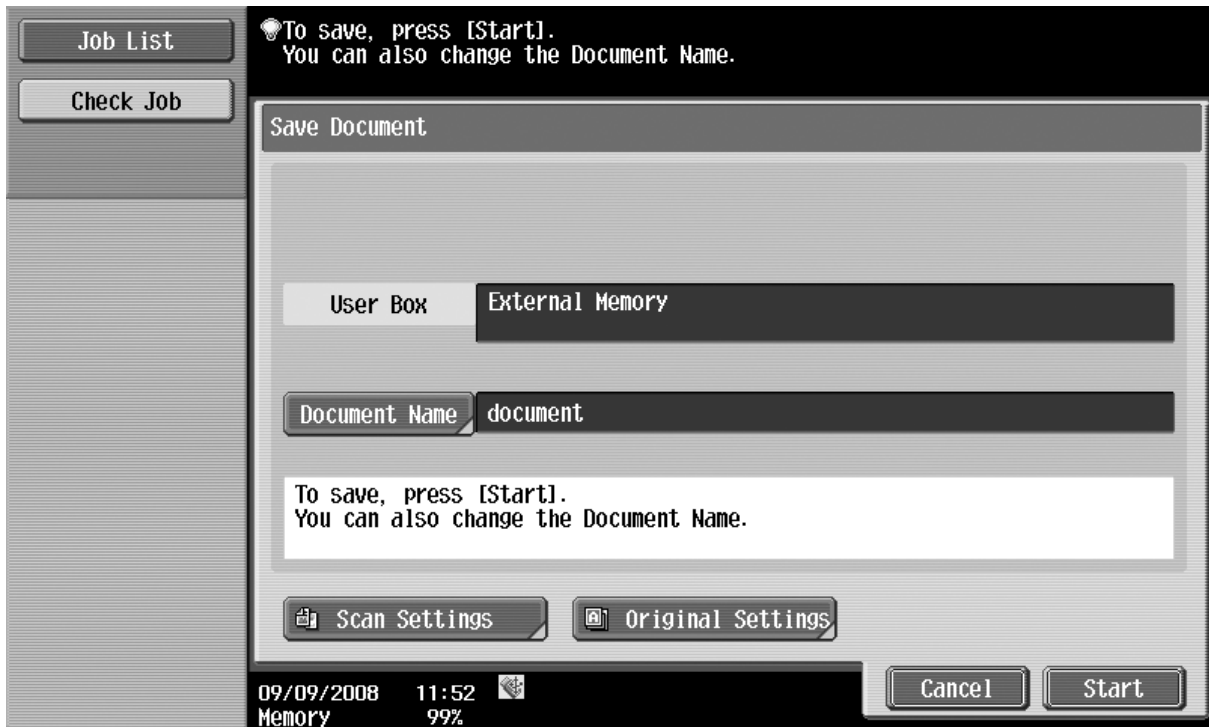

-The document name can be changed when saving a document.

 3 Once you are ready to start scanning Press the Green Start Button on the device to start the scan process.

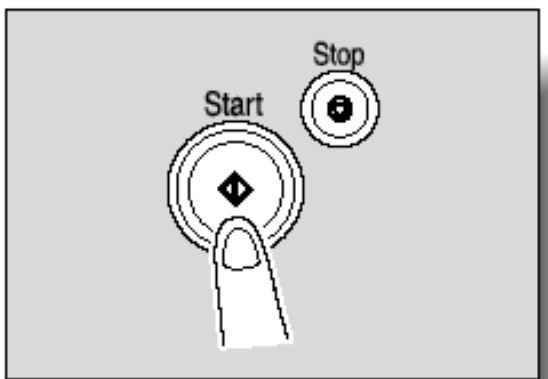

**Although the "Print from external memory" option is available without authenticating for scanning, when trying to print from external memory an "insufficient funds" error will be displayed. Unlock the PCounter Terminal in Print Mode before printing from external memory to avoid this error.*